EZ7200 Series Volatile Fatty Acids Analyzer

Applications

- Anaerobic wastewater treatment
- Anaerobic sludge treatment
- Pilot scale anaerobic reactors



Online, automatic monitoring of critical process parameters and process efficiency in anaerobic digesters

A new control alternative for anaerobic digestion

Due to the expensive or time-consuming character of most analysis methods for anaerobic processes, industrial digesters are sometimes not adequately monitored. Developed specifically for monitoring anaerobic digesters, the EZ7200 Series bring the possibility of implementing new control alternatives to typical operating problems in mid to large scale digesters.

Critical parameter monitoring, online and automatic

Anaerobic digesters require monitoring of a specific set of critical parameters in order to obtain optimal production efficiency, compliance and biogas yield. The primary parameter is volatile fatty acids (VFAs), representing the metabolic condition of the anaerobic digester and responding quickly to stress induced changes, combined with alkalinity.

The EZ7200 Series are easy-to-operate online titrators using a unique and robust method for measuring the critical process parameters in one single run, enabling insight as well as full control over the anaerobic process:

- Direct titration with minimum volatilisation
- Continuous monitoring of the anaerobic process
- Enabling higher loading rate for maximum methane production
- Prevention of digester failure due to VFA accumulation
- Easy implementation within a dynamic control strategy
- Easy integration into corporate networks
- Multiple stream analysis (up to 8 streams)





Technical Data*

Model	EZ720x	EZ725 x			
Parameter	Volatile fatty acids (VFA)	Volatile fatty acids (VFA), total alkalinity, partial alkalinity			
	10 - 500 mg/L	VFAs 10 - 500 mg/L as acetate equivalent;			
	as acetate equivalent	Alkalinity, total and Alkalinity, 50 - 2500 mg/L as CaCO ₃			
	20 - 1000 mg/L	VFAs 20 - 1000 mg/L as acetate equivalent;			
Range	as acetate equivalent	Alkalinity, total and Alkalinity, partial 50 - 2500 mg/L as CaC			
-	100 - 5000 mg/L as acetate equivalent	VFAs 100 - 5000 mg/L as acetate equivalent; Alkalinity, total and Alkalinity, partial 250 - 5000 mg/L as CaCO ₃			
	500 - 10,000 mg/L	VFAs 500 - 10000 mg/L as acetate equivalent;			
	as acetate equivalent	Alkalinity, total and Alkalinity, partial 250 - 5000 mg/L as $CaCO_3$			
Lower Limit of	333 333 333 3 3				
Detection (LOD)	≤ 10 mg/L				
Precision	Better than 3% full scale range for standard test solutions				
Measurement Method	Acid-base titration				
Interferences	Phosphates and similar dissociating ions and non-fatty acids which on acidification from undissociated acids may cause interference. Sulphide may deteriorate some types of pH electrodes. Fats, oil, proteins, surfactants and tar.				
Cycle Time	10 - 15 minutes				
Automatic cleaning	Yes				
Calibration	Automatic; frequency freely programmable				
Validation	Automatic; frequency freely programmable				
Ambient Temperature	10 - 30 °C ±4 °C deviation at 5 - 95% relative humidity (non-condensing)				
Reagent Requirements	Keep between 10 - 30 °C (50 - 86 °F)				
Sample Pressure	By external overflow vessel				
Sample Flow Rate	100 - 300 mL/min				
Sample Temperature	10 - 30 °C (50 - 86 °F)				
Sample Quality	Maximum particle size 500 μm, < 0.1 g/L				
, , , , , ,	Most applications require the use of an EZ9130 sampling/filtration system.				
Power		100 - 240 VAC, 50/60 Hz Max. power consumption: 120 VA			
Instrument Air	Dry and oil free	according to ISA-S7.0.01-1996 quality standard for instrument air			
Rinsing	Dry and on noo	With tap water			
Drain		Atmospheric pressure, vented, min. Ø 64 mm			
Earth Connection	Dry and clean earth	pole with low impedance (< 1 Ohm) using an earth cable of > 2.5 mm ²			
Analog Outputs	·	- 20 mA max. 500 Ohm load, standard 1, max. 8 (option)			
Digital Outputs		Optional: Modbus (TCP/IP, RS485)			
Alarm	1 x malfunctioning	g, 4 x user-configurable, max. 24 VDC/0.5 A, potential free contacts			
Protection Class		Analyzer cabinet: IP55 / Panel PC: IP65			
Material		Hinged part: Thermoform ABS, door: plexiglass Wall section: Galvanized steel, powder coated			
Dimensions (H x W x D)		690 mm x 465 mm x 330 mm			
Weight		25 kg (55 lbs.)			
Certifications		CE compliant / ETL certified			

*Subject to change without notice.

Dimensions - Drawings

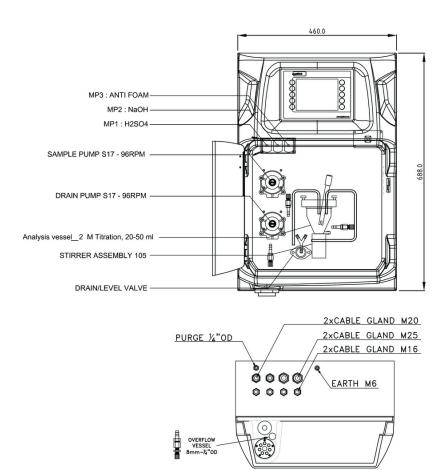

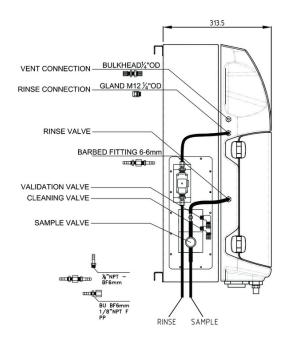

Hach Service

With Hach Service, you have a global partner who understands your needs and cares about delivering timely, high-quality service you can trust. Our Service Team brings unique expertise to help you maximize instrument uptime, ensure data integrity, maintain operational stability, and reduce compliance risk.

Order Information - Part Number Configurator

VFA 10-500 mg/L	EZ7200.99						
VFA 20-1000 mg/L	EZ7201.99						
VFA 100-5000 mg/L	EZ7202.99						
VFA 500-10000 mg/L	EZ7203.99		U			v	
VFA 10-500 mg/L; total & partial alkalinity 50-2500 mg/L CaCO ₃	EZ7250.99	Х	Х	Х	Х	Х	2
VFA 20-1000 mg/L; total & partial alkalinity 50-2500 mg/L CaCO ₃	EZ7251.99						
VFA 100-5000 mg/L; total & partial alkalinity 250-5000 mg/L CaCO ₃	EZ7252.99						
VFA 500-10000 mg/L; total & partial alkalinity 250-5000 mg/L CaCO ₃	EZ7253.99						
Measurement range settings / Dilution options							
Standard range		0					
Power supply							
Standard 100 - 240 VAC, 50/60 Hz			0				
Standard 100 - 240 VAO, 50/00 FIZ			U				
Number of sample streams							
1 stream				1			
2 streams				2			
3 streams				3			
4 streams				4			
5 streams				5			
6 streams				6			
7 streams				7			
8 streams				8			
Outputs							
1x mA					1		
2x mA					2		
3x mA					3		
4x mA					4		
5x mA					5		
6x mA					6		
7x mA					7		
8x mA					8		
Modbus TCP/IP					В		
Modbus RS485							
1x mA + Modbus RS485					C E		
2x mA + Modbus RS485					F		
3x mA + Modbus RS485							
4x mA + Modbus RS485*					G		
1x mA + Modbus TCP/IP					Н		
2x mA + Modbus TCP/IP							
3x mA + Modbus TCP/IP					J		
4x mA + Modbus TCP/IP*					K		
*Combinations of up to 8x mA + Modbus are available.					L		
No adaption, standard version						0	

