EZ2000 Series Online Colorimetric Analyzers for Total Manganese

Applications

- Wastewater
- Drinking Water
- Power Generation
- Surface Water



Online colorimetric analysis of Total Manganese in water

Results you can rely on

EZ2000 Total Manganese Analyzers achieve excellent precision and accuracy. At the heart of the colorimeter there is a compact photometer assembly developed especially for the EZ Series. Consumption of reagents is reduced by low volume analysis, yet high sensitivity is assured by a long optical path length. The limit of detection is in the low $\mu g/L$ range.

EZ2000 Total Manganese Analyzers have an internal digestion unit. This additional step prior to analysis allows to measure non-soluble or complexed metal species.

Smart automatic features for calibration, validation, priming and cleaning are embedded in the controller software and contribute to analytical performance, maximized uptime and negligible operator invervention. Precision micropumps dose all reagents. Sample lines and analysis vessel are cleaned with demineralized water to eliminate cross contamination between samples. Electronic and wet-chemical part of the analyzer are strictly separated. A transparent door allows for instant visual inspection of the wet part.

Flexibility that meets your needs

EZ Series Manganese Analyzers come in an attractive, ergonomic mainframe with a compact footprint. All hardware is controlled by the integrated industrial panel PC. The modular build allows for the analyzer to match your application and operational needs.

- The standard measuring range can be narrowed by a different calibration range or extended via internal dilution options.
- Analog and digital output options
- Multiple stream analysis for up to 8 sample streams

Options for the determination of Manganese include: Total Manganese, Total Manganese & Manganese Mn(II), dissolved




Technical Data*

| Parameter | Total Manganese | | | | | |
|-----------------------------------|--|--|--|--|--|--|
| | Manganese Mn(II), dissolved | | | | | |
| Measurement Method | Colorimetric measurement using formaldoxime method at 450 nm | | | | | |
| Range | 0.02 - 1 mg/L Mn Optional: 0.004 - 0.1 mg/L 0.01 - 0.25 mg/L 0.01 - 0.5 mg/L 0.16 - 4 mg/L (with internal dilution) 0.32 - 10 mg/L (with internal dilution) 2 - 20 mg/L (with internal dilution) (only EZ2003) | | | | | |
| Precision | Better than 2% full scale range for standard test solutions | | | | | |
| Lower Limit of Detection (LOD) | ≤ 4 µg/L | | | | | |
| Interferences | Large amounts of color and turbidity interfere. Fats, oil, proteins, surfactants and tar. | | | | | |
| Cycle Time | 20 min Total Mn (dilution + 5 min) 30 min Total Mn & Mn(II) | | | | | |
| Automatic cleaning | Yes | | | | | |
| Calibration | Automatic, 2-point; frequency freely programmable | | | | | |
| Validation | Automatic; frequency freely programmable | | | | | |
| Ambient Temperature | 10 - 30 °C \pm 4 °C deviation (50 - 86 °F \pm 7.2 °F deviation) at 5 - 95% relative humidity (non-condensing) | | | | | |
| Reagent Requirements | Keep between 10 - 30 °C (50 - 86 °F) | | | | | |
| Sample Pressure | By external overflow vessel | | | | | |
| Sample Flow Rate | 100 - 300 mL/min | | | | | |
| Sample Temperature | 10 - 30 °C (50 - 86 °F) | | | | | |
| Sample Quality | Maximum particle size 100 μm, < 0.1 g/L; Turbidity < 50 NTU | | | | | |
| Power | 230 VAC, 50/60 Hz 120 VAC, 50/60 Hz Max. power consumption: 440 VA | | | | | |
| Instrument Air | Dry and oil free according to ISA-S7.0.01-1996 quality standard for instrument air | | | | | |
| Demineralized Water | For rinsing / dilution | | | | | |
| Drain | Atmospheric pressure, vented, min. Ø 64 mm | | | | | |
| Cooling Water | Flow rate approx. 5 L/h; temperature max. 30 °C; pressure max. 0.5 bar | | | | | |
| Earth Connection | Dry and clean earth pole with low impedance (< 1 Ohm) using an earth cable of > 2.5 mm ² | | | | | |
| Analog Outputs | Active 4 - 20 mA max. 500 Ohm load, standard 1, max. 8 (option) | | | | | |
| Digital Outputs | Optional: Modbus (TCP/IP, RS485) | | | | | |
| Alarm | 1 x malfunctioning, 4 x user-configurable, max. 24 VDC/0.5 A, potential free contacts | | | | | |
| Protection Class | Analyser cabinet: IP44 / Panel PC: IP65 | | | | | |
| Material | Hinged part: Thermoform ABS, door: plexiglass Wall section: Galvanized steel, powder coated | | | | | |
| Dimensions (H x W x D) | 690 mm x 465 mm x 330 mm | | | | | |
| Weight | 25 kg (55 lbs.) | | | | | |
| Certifications | CE compliant / ETL certified | | | | | |

*Subject to change without notice.

Dimensions

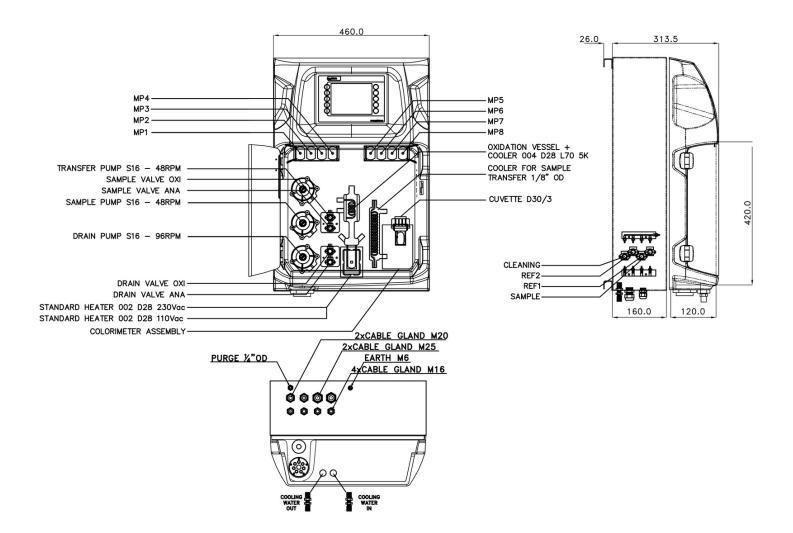

Hach Service

With Hach Service, you have a global partner who understands your needs and cares about delivering timely, high-quality service you can trust. Our Service Team brings unique expertise to help you maximize instrument uptime, ensure data integrity, maintain operational stability, and reduce compliance risk.

DOC053.53.35157.0ct22

Order Information - Part Number Configurator

| Total Mn, 0.02-1 mg/L Total Mn / Mn(II), 0.02-1 mg/L | EZ2003.53 EZ2303.53 | х | x | x | х | х | 2 |
|--|------------------------|---------------------------------|--------|------------------|---|---|---|
| Measurement range settings / Dilu 10% of standard range 25% of standard range 50% of standard range Standard range Internal micropump dilution (factor 4) Internal micropump dilution (factor 10) Internal micropump dilution (factor 20) | | A B C 0 1 3 4 | | | | | |
| Power supply 230 VAC, 50/60 Hz 120 VAC, 50/60 Hz | | | A B | | | | |
| Number of sample streams 1 stream 2 streams 4 streams 8 streams | | | | 1 2 4 8 | | | |
| Outputs 1x mA 2x mA 4x mA 8x mA 1x mA + Modbus RS485 2x mA + Modbus RS485 4x mA + Modbus RS485 8x mA + Modbus RS485 1x mA + Modbus TCP/IP 2x mA + Modbus TCP/IP 4x mA + Modbus TCP/IP 8x mA + Modbus TCP/IP | | | | | 1 2 4 8 E F H P I J L | | |
| No adaption, standard version | | | | | | 0 | |

